19900 Free-Standing Enclosures
For 19000 Series Recessed Mounted Cell Phone Lockers
Installation Instructions

Installation of the free-standing enclosure requires first installing the enclosure to its mounting surface, then installing the enclosure front panel to the enclosure and lastly installing the recessed cell phone locker into the enclosure.

Installing Free-Standing Enclosure to Floor

Place the enclosure onto the selected location. Mark the fastener locations on the mounting surface by transferring the four (4) large holes locations in the bottom side flanges to the mounting surface. Remove the enclosure and make the holes for the installation fasteners. Install the fasteners (not provided). Return the enclosure to the selected location. Complete the installation of the fasteners. The use of leveling nuts on stud anchors is suggested.

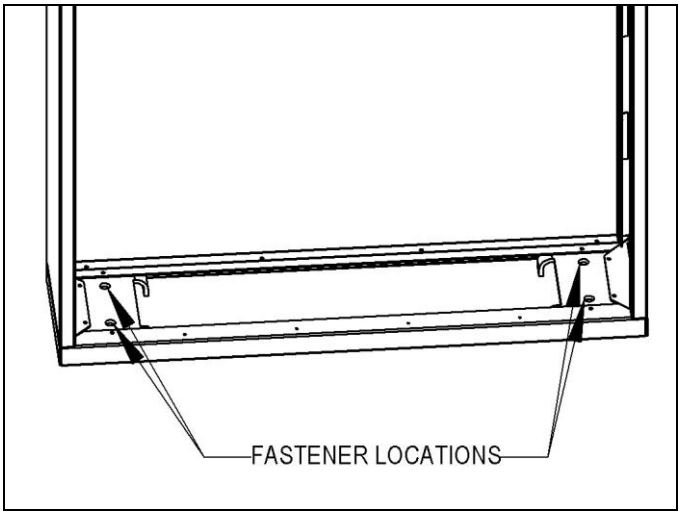

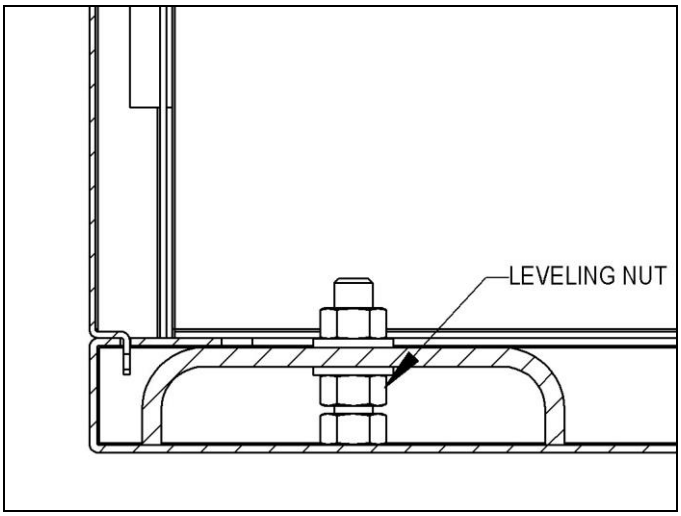

Installing Enclosure Front Panel

Install the front panel to the enclosure using #10 x 1/2 in. long screws (provided). Attach it to the enclosure along the two sides and the bottom. Hand tighten the screws.

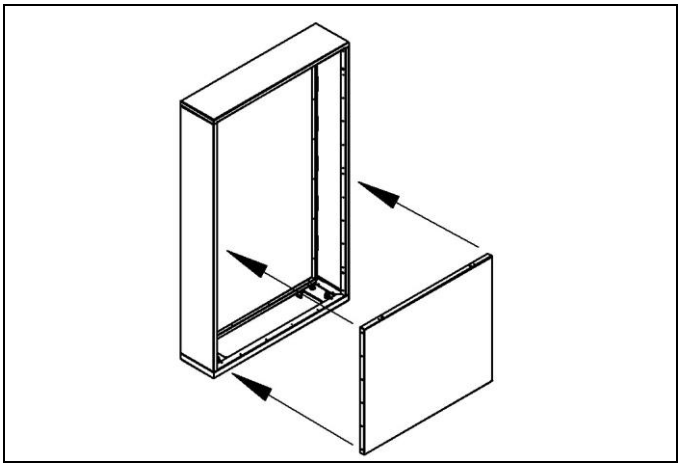

Installing Recessed Cell Phone Locker

Install the locker unit into the enclosure by sliding it into the enclosure until its front peripheral flange is flush against the front of the enclosure. Open the four corner compartments of the cell phone locker. Install #8 x 1-1/4 in. long screws (provided) through the top and bottom of the locker unit into the enclosure. Close the compartment doors.

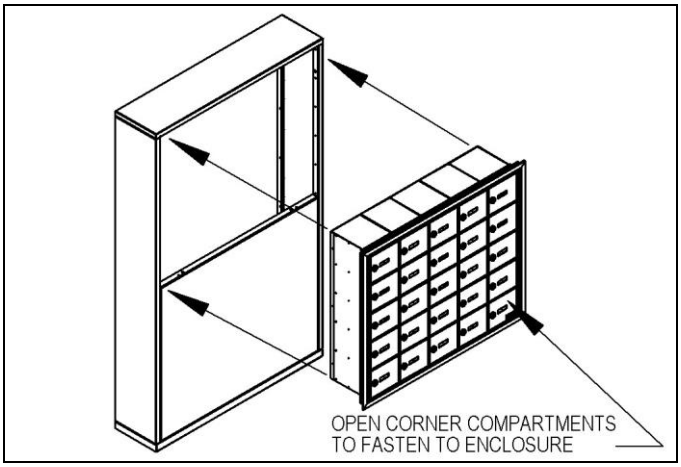

SALSBURY INDUSTRIES
1010 East 62nd Street, Los Angeles, CA 90001-1598
Phone: 1-800-624-5269 Int'l Phone: 323-846-6700
Fax: 1-800-624-5299 Int'l Fax: 323-846-6800

Installation instructions are provided as general guidelines. It is advised that a professional installer be consulted. Salsbury Industries assumes no product assembly or installation liability.
Copyright © 2013 Salsbury Industries. All rights reserved. (Rev. 01, 4/17/2013) Page 1 of 1